


636 Talking Camera



"Polaroid" is a registered trademark of/est une marque déposée de Polaroid Corporation, Cambridge, MA, U.S.A. PX 7526 English, Spanish, French, Portuguese 12/94 Printed in U.S.A.

English

The 636 Talking camera features a fun way to liven up your pictures with family and friends. It plays amusing messages just before the shutter opens, generating spontaneous smiles from your subjects at just the right time.

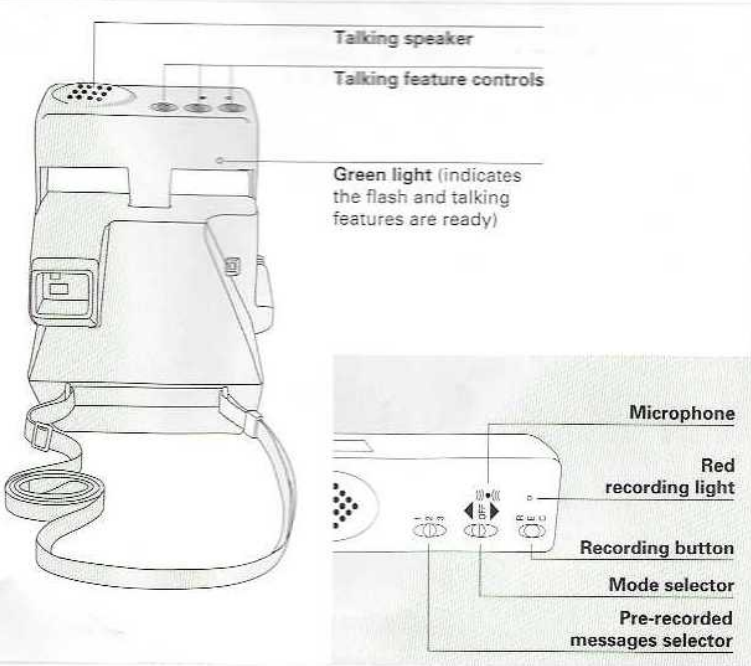

You can choose from one of three pre-recorded messages, or you can record your own message (up to eight seconds in length) for a different message every time. The talking feature can also be turned off.

Important: To use the talking feature, the camera must be open (flash up) and loaded with film, and the green flash-ready light must be on.

To hear a pre-recorded message

Orient the camera as shown. Move the **mode selector** on top of the camera to the left ◀ position. Select 1, 2 or 3 from the **pre-recorded messages selector**. Choose another switch position (1, 2 or 3) to hear a different pre-recorded message. Press the camera's shutter button **halfway** to play the message and continue pressing to take the picture.

Pressing the shutter button also activates the green ready-light on the back of the camera. This light must be **on** when you take your picture.

To record your own message

Move the **mode selector** to the right ▶ position. **Press and hold** the **REC** (recording) button while speaking into the microphone))) ● (((. The red recording light above the **REC** button will light while you record for up to eight seconds. For best results, hold the camera 2 to 3 inches (5–7 cm) from you as you speak into the microphone.

You may create a new message by repeating these steps and recording over your previous message.


To hear your own message

Move the **mode selector** to the right ▶ position. Press the camera's shutter button halfway to play your own message.

Caution: If the **REC** button is **accidentally** pressed, your recorded message will be erased.

To turn the talking feature off

Move the **mode selector** to the **OFF** position. Press the shutter button to take pictures without any talking feature sound.

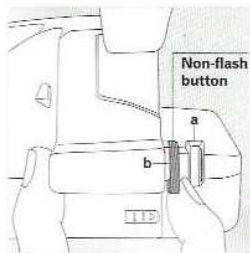

To take a non-flash picture with the talking feature

Press the shutter button **(a)** in halfway until you hear the talking feature begin. Release the button, then press the non-flash button **(b)** to take the picture.

Note: The battery in the film pack powers the camera and the talking feature. If the talking volume is low, you may need to replace the film pack. Overusing the talking feature will drain your film battery.